NewTechWood

Patent Pending

DECK-A-FLOOR®

Planter/Sand Box Installation Guide

1. Lay & connect the grids on a flat surface

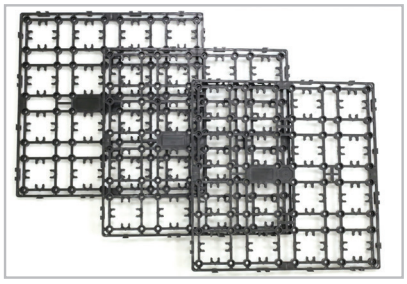

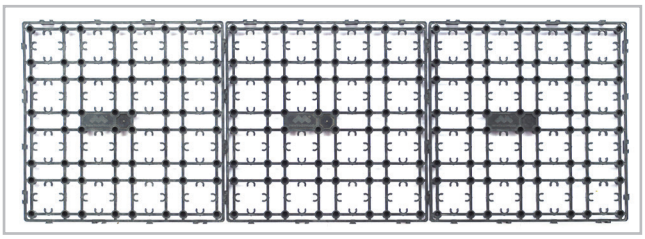

2. Insert the posts on the 4 corners

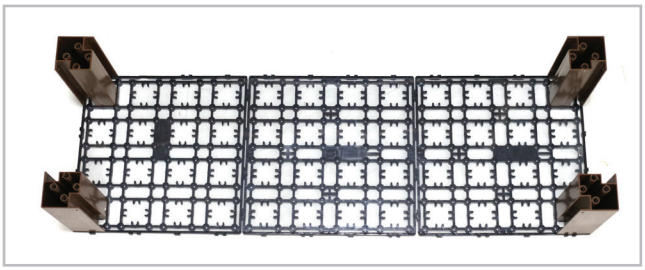

3. Lay the perforated sheet on the grids

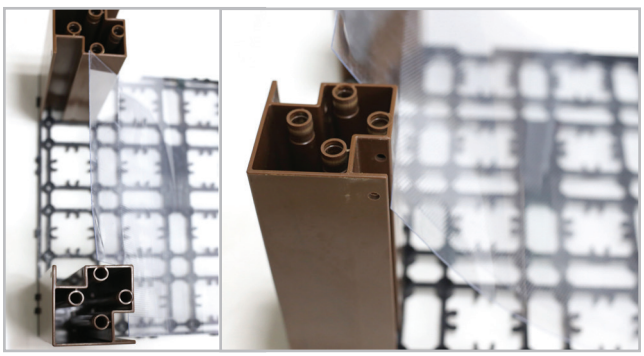

4. Insert the boards between the posts

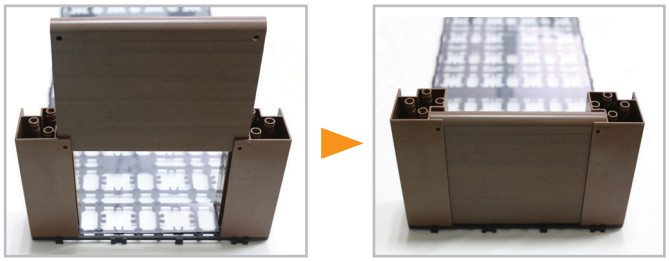

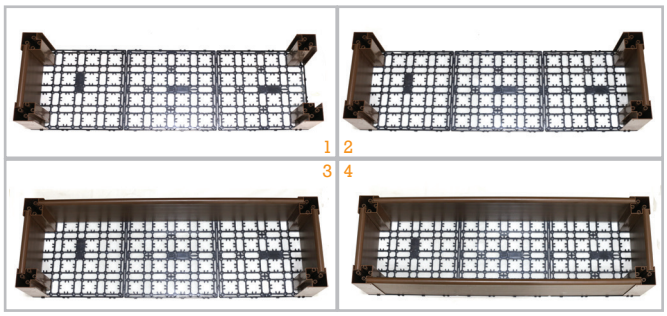

5. Insert 2 plugs into the pre-drilled holes in every board to lock the board and post together.

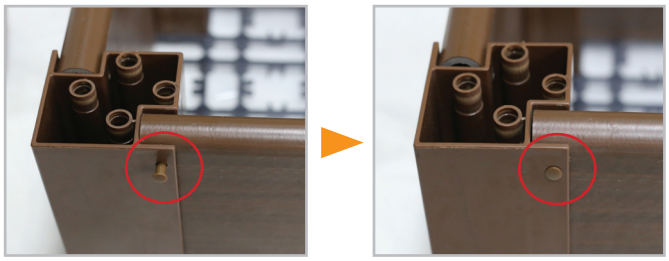
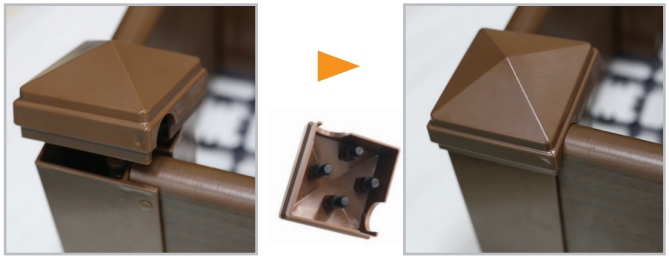
6. Press down to fix the post caps & done